

AXLE STABILIZER BEARING & SEAL BOTH SIDES

Fits Nissan '82-up, Automatic & Stanza, Pulsar Standard '82-'90



93125LRB 15723 Replacement Seal

1. Remove the axle.
2. Remove the seal (**Figure 1**).
3. Clean the area where the seal was removed. Use Lock-Tite™ sealant when installing, (**Figure 2**).

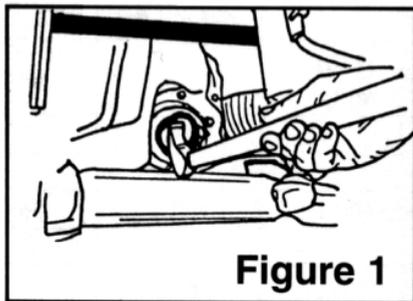


Figure 1

4. Install the stabilizer with Teckpak Bearing Driver T404-303 as you would a new axle seal.

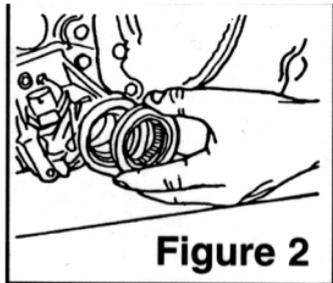


Figure 2

5. Before reinstalling the axle, sand the seal surface on the inner c.v. joint (**Figure 4**), and apply a generous amount of assembly lube or axle grease (**Figure 5**).

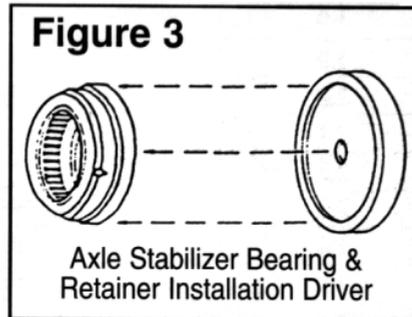


Figure 3
Axle Stabilizer Bearing &
Retainer Installation Driver

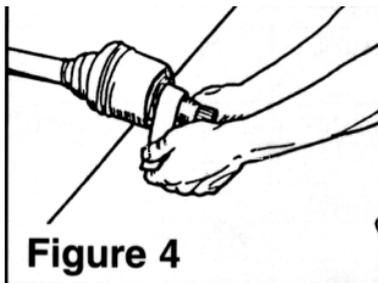


Figure 4

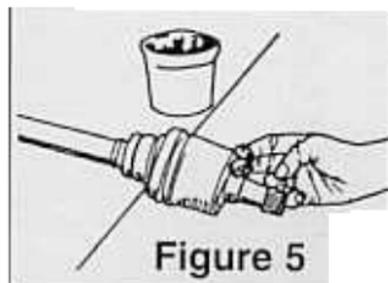


Figure 5