

INSTALLATION INSTRUCTIONS

GM HARNESS REMOVAL TOOL

3L80E, 4L30E, 4L60E, 4L80E, 4T40E

Helps eliminate harness replacement the quick, easy way! In the car or on the bench.


Use this great new tool with or without a bushing driver handle to make harness removal a snap, even with transmission still in vehicle.



TGM-HR

1. To remove the harness from the transmission, simply place tool over the protruding harness and push down.

This will disengage the plastic retainers that hold it in place. Now tug gently on the harness wires to remove as shown in **Figure 1**.

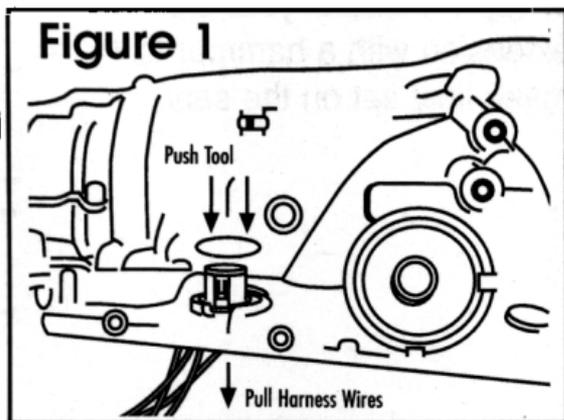

2. The Harness Removal Tool fits a standard bushing driver handle and can be used while harness is in the vehicle (**Figure 2**).

