

INSTALLATION INSTRUCTIONS

Part# T74498-1B

Shift Cable Repair End (Grommet)

**Fits: GM '04 - '12 Colorado / Canyon
with "Ball" or "Bell" shaped pin on lever.**

1. Install the new clip into the shift cable.
(Fig. 1 & 2)
2. Snap the cable onto the shift arm.
3. Check the connection to insure that the clip is secure.

**NOTE: For use on "Ball" and "Bell"
shaped shafts. (Fig. 3)**


FIG. 1



FIG. 2



FIG. 3

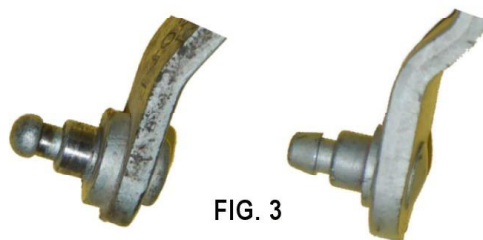

**Teckpak Hotline: 1-800-527-2544
www.teckpak-fitzall.com**