


INSTALLATION INSTRUCTIONS

Ball Joint Remover with Adapter

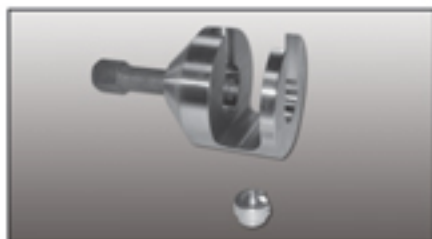

TFD-BJR Fits Ford Late Model Taurus & Windstar

1. Remove the wheel from the vehicle
2. Hold the TFD-BJR with the bolt down; install the cup onto the small end of the bolt with the small end next to the bolts shoulder.
3. Lower the Bolt until the cut in the cup is within 1/8 inch of bottom of the tool.
4. Hold the slots of the driver and the cup toward the front of the vehicle while slipping the tool over the lower A-frame from the rear.
5. You will need your half inch air impact with an impact 7/8 inch socket to push the ball joint loose.
6. Pull the TFD-BJR forward until the back of the tool is flush against the lower A-frame then twist the cup 90 degrees so you can't see end of the bolt; then turn on the impact until the ball joint pops loose.
7. When the ball joint pops loose then reverse the bolt until the cup is down against the puller; you can then remove the tool from the lower A-frame.

Teckpak Hotline: 1-800-527-2544 / www.teckpak-fitzall.com