

INSTALLATION INSTRUCTIONS


4R70W Valve Body Alignment Pin Adapters

'93-'95 Old Style Case with the late
model '96-UP Valve Body

76821

Includes:

Valve Body Alignment Pin Adapters
2 per pack
Installation Instructions

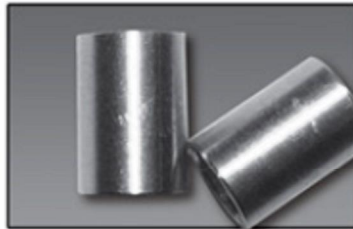

1. Install the bushings into the early 4R70W Transmission Case, with the external taper down into the alignment holes.
2. Install the late valve body onto the early transmission case placing the alignment pins into the alignment bushings.

Teckpak Hotline: 1-800-527-2544 • www.teckpak-fitzall.com