

DETENT CABLE

Applications

Year	Model & Engine Size	Part No.	Year	Model & Engine
BUICK PASSENGER-Apollo			CHEVROLET PASSENGER- Corsica & Beretta	
1974-77	All w/350 A.T.....	K35955U	1988-90	All w/A.T.....K65940U
BUICK PASSENGER-Century			CHEVROLET VAN-LUMINA	
1982-87	All w/125 or 440T4.....	K65940U	1989-up	All w/A.T.....K65940U
1977-81	All w/200, 200C or 2004R.....	K65940U	CHEVROLET, GMC TRUCKS-S-10, S-15,	
1976-81	All w/350, 350C, A.T. Carb. Mount....	K35955U	S-10 Blazer, S-10 Jimmy, Astro and Safari Van	
1976-80	200, 200C.....	K35955U	1982-90	All w/200C A.T.....K65940U
BUICK PASSENGER-Electra and Elec. Park Ave.			1982-90	All w/700R4 A.T.....K65940U
1985-89	All w/125 or 440T4.....	K65940U	CHEVROLET, GMC TRUCKS-Suburbans	
1981-84	All w/200, 200C or 2004R.....	K65940U	1982-90	All w/700R4 A.T.....K65940U
1977-82	All w/350 or 350C.....	K35955U	1980-86	All w/350C A.T.....K35955U
Buick Passenger-LeSabre and Estate Wagon			1973-79	All w/350 A.T.....K35955U
1986-89	All w/440T4 A.T.....	K65940U	CHEVROLET, GMC TRUCKS-Full Size Blazers &	
1977-85	All w/200, 200C or 2004R A.T.....	K65940U	Jimmys, Vans	
1972-82	All w/350, 350C A.T. Carb. Mount.....	K35955U	1982-90	All w/700R4 A.T.....K65940U
1977-80	200, 200C.....	K35955U	1980-86	All w/350C A.T.....K35955U
BUICK PASSENGER-Regal and Somerset			1973-79	All w/350 A.T.....K35955U
1985-90	All w/125 or 440T4.....	K65940U	OLDSMOBILE PASSENGER-Firenza, Omega, Cutlass	
1978-87	All w/200, 200C or 2004R.....	K65940U	Sierra, Cutlass Calais	
1973-84	All w/250, 250C or 350, 350C A.T.....	K35955U	1980-90 All FWD W/125 OR 125C A.T	
w/Carburetor Mount			Except 2.04 C	
1978-80	All w/200, 200C.....	K35955U	1984-90 All FWD w/440T4 A.T.....	
BUICK PASSENGER-Riviera			OLDSMOBILE PASSENGER-Omega and Starfire	
1979-90	All FWD.....	K65940U	1976-79 All w/200 A.T.....	
1977-78	All w/200 A.T.....	K65940U	1976-79 All w/350 A.T.....	
1978-80	All RWD w/350 A.T.....	K35955U	1976-79 All w/200 A.T.....	
1977-78	All w/200 A.T.....	K35955U	OLDSMOBILE PASSENGER-98 Regency, Toronado	
BUICK PASSENGER-Skylark, Skyhawk and Omega			1985-90 All FWD w/440T4 A.T.....	
1980-89	All FWD 125, 125C A.T.....	K65940U	OLDSMOBILE PASSENGER- Cutlass Supreme,Cutlass	
1976-80	All w/200, 200C A.T.....	K65940U	Calais, Cutlass Salon, Custom Cruiser Wagon, Delta 88.	
1973-79	All w/350 Transmission.....	K35955U	98 Regency	
1976-80	All w/200, 200C A.T.....	K35955U	1976-87 All w/200 A.T.....	
CADILLAC PASSENGER-Cimarron			1981-85 All w/2004R A.T.....	
1982-86	All w/FWD A.T.....	K65940U	1976-84 All w/250 ,250C, 350, 350C A.T.	
CADILLAC PASSENGER-DeVille and Fleetwood			with Carburetor Mount.....	
1981-87	All w/200 ,200C, 2004R A.T.....	K65940U	1976-80 All w/200, 200C A.T.....	
1981-87	All w/350, 350C A.T.....	K35955U	PONTIAC PASSENGER-J-2000, PHOENIX, 6000,	
CADILLAC PASSENGER-Eldorado and Seville			Grand Am, Sunbird.	
1980-87	All.....	K65940U	1980-91 All FWD w/A.T.....	
CHEVROLET PASSENGER-Cadet and Cavalier			PONTIAC PASSENGER-Phoenix, Sunbird, Astre, Venture	
1982-86	All w/A.T.....	K65940U	1976-79 All w/200 A.T.....	
CHEVROLET PASSENGER-Celebrity and Citation			1976-79 All w/200 A.T.....	
1980-88	All w/125 or 440T4 Trans.....	K65940U	1976-79 All w/350 or 375 A.T.....	
CHEVROLET PASSENGER-Corvette			1976-79 All w/200, 200C A.T.....	
1981	All W/350C A.T.....	K35955U	PONTIAC PASSENGER-Fiero	
1982-89	All w/700R4 A.T.....	K65940U	1984-88 All w/A.T.....	
CHEVROLET PASSENGER-Camaro and Berlinetta			PONTIAC PASSENGER-T-1000	
1975-81	All w/350, 350C A.T.....	K35955U	1983-84 All w/A.T.....	
1982-85	All w/200C A.T.....	K65940U	PONTIAC PASSENGER-Bonneville, Catalina, Grand Prix	
1983-89	All w/700R4 All.....	K65940U	1977-87 All w/200 ,200C A.T.....	
CHEVROLET PASSENGER-Chevette			1977-84 All w/250C, 350, 350C A.T.....	
1981-84	All w/200C A.T.....	K65940U	1977-80 All w/200, 200C A.T.....	
CHEVROLET PASSENGER-Caprice and Impala			PONTIAC PASSENGER-LeMans, Grand LeMans	
1976-84	All w/250C, 350, 350C A.T.....	K35955U	1977-81 All W/200, 200C A.T.....	
1976-85	All w/200, 200C A.T.....	K65940U	1976-81 All w/250, 350, 350C A.T.....	
1986-89	All w/A.T.....	K65940U	1977-80 All w/200, 200C A.T.....	
1976-80	All w/200, 200C A.T.....	K35955U	PONTIAC PASSENGER-Firebird	
CHEVROLET-Malibu, Malibu Classic, Monte Carlo,			1976-81 All w/350, 350C A.T.....	
El Camino, Chevelle			1981-90 All w/200, 200C, 700R4 A.T.....	
1976-84	All w/250C, 350, 350C A.T.....	K35955U	PONTIAC PASSENGER-Parisiene	
1978-88	All w/200, 200C A.T.....	K65940U	1983-84 All w/250C, 350C A.T.....	
1985-88	All w/Overdrive A.T.....	K65940U	1983-86 All w/200C, 2004R, 700R4 A.T.....	
1978-80	All w/200, 200C A.T.....	K35955U	PONTIAC PASSENGER-Safari	
CHEVROLET PASSENGER-Nova			1987-89 All w/2004R Transmissions.....	
1976-79	All w/350 A.T.....	K35955U		
1976-79	All w/200 A.T.....	K65940U		
1976-79	All w/200 A.T.....	K35955U		
CHEVROLET PASSENGER-Monza and Vega				
1976-77	All w/200 A.T.....	K65940U		
1976-80	All w/350 A.T.....	K35955U		
1976-77	All w/200 A.T.....	K35955U		


Installation Instructions

GM ADJUSTABLE DETENT CABLE

By TECKPAK

Part K65940U Part K35955U

CAUTION: If plastic wrapping sticks to the inner cable, remove G (brass cable retainer) and slide excess plastic off of the inner cable.

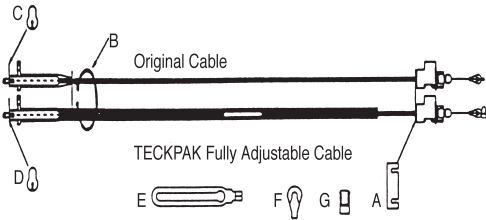

1. Remove the original cable from the vehicle.
2. Remove TECKPAK's adjustable detent cable from the package, notice the tool board enclosed. Part A is used to hold the top of the original cable and the new adjustable cable parallel for accurate measurement. The bottom of the cable is aligned with the retaining wire B. Parts C & D (identical to each other) are used to keep the inner cables in position.
3. Clip A & B in place, align both ends of the outer cable, as shown above. Use 2 open end 1/2" & 9/16" wrenches to tighten the compression fitting on the upper portion of the cable.
- 4.Next clip on C & D, one on the original cable, and the other on the new adjustable cable. These tools are used to keep the inner cable end from pulling up

- into the lower cable housing. Should the inner cable pull through the outer housing, merely push it back into the cable. With both inner cables pulled tight, install the appropriate cable end, E or F, depending upon which was on your original cable. Now slip the brass cable end retainer G onto the inner cable so both the original inner cable end and the adjustable cable end are in the same position. Tighten the small screw with a screwdriver. Cut the inner cable approximately 2" longer than necessary. This is done to make sure you will have sufficient inner cable, if any further adjustment is necessary.
5. Install the cable on the vehicle and make the necessary adjustments with the upper cable push button adjuster.
 6. When you are sure your installation is complete, cut off the extra inner cable.