


# INSTALLATION INSTRUCTIONS

**Part# T74498-1**

## **Shift Cable Repair End (Grommet)**

**Fits: GM 4L60E, 4L65E, 4L70E & FORD CD4E Vehicles w/ Floor Shifters.**

1. Remove the broken clip pieces from the cable end.
2. Install the new clip into the shift cable so that the solid side of the clip contacts the shift pin first.
3. After insuring that the groove in the shift pin is free of debris, slide the cable onto the shift arm.
4. Check the connection to insure that the clip is secure.
5. For use with the style of shift lever pin shown here.

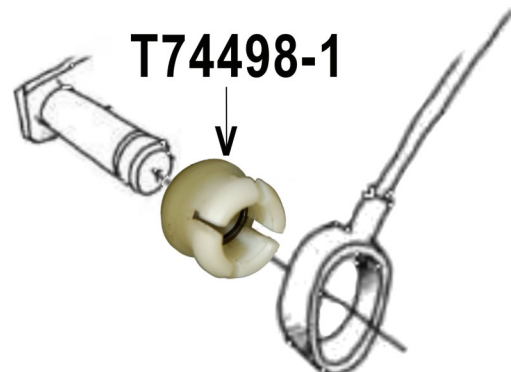

**Teckpak Hotline: 1-800-527-2544**  
**[www.teckpak-fitzall.com](http://www.teckpak-fitzall.com)**