


# INSTALLATION INSTRUCTIONS

**Part# 64125LRB**

## **GM Axle Stabilizer**

**For GM 4T60E / 65E  
(Right Side Only)**

1. Remove the axle.
2. Remove the axle seal.
3. Clean the area where the seal was removed.
4. Place Blue Lock-Tite on the knurl and Blue Silicone on the corner that will be against the case of the axle stabilizer.
5. Install the stabilizer until it bottoms against the case. You will know because the silicone will flatten against the case.
6. Reinstall the axle.

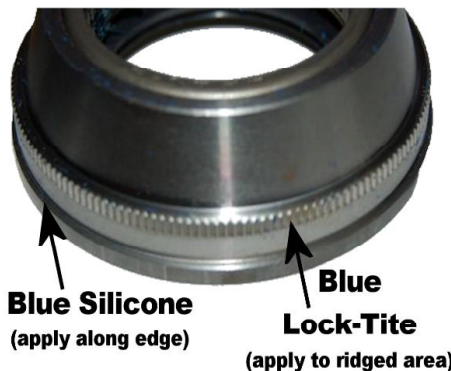

**Teckpak Hotline: 1-800-527-2544**  
**[www.teckpak-fitzall.com](http://www.teckpak-fitzall.com)**